

How to Connect and Print from an iPhone

TechRounder PDF Edition

Live article: <https://www.techrounder.com/how-to/how-to-connect-and-print-from-an-iphone/>

By Vipin PG | Published February 15, 2025 | Updated February 15, 2025 | Format: Guide | 4 min read

Quick answer

To print from your iPhone, the simplest method is using AirPrint—just make sure both your iPhone and printer are on the same Wi-Fi network, open the file you want to print, tap the Share button, select Print, choose your printer, and tap Print.

Printing from an iPhone has never been easier, thanks to Apple's AirPrint technology and other wireless printing solutions. Whether you need to print an important document, a photo, or an email, you can do it without installing additional drivers or dealing with complex setups.

This guide will walk you through various methods to connect your iPhone to a printer, covering AirPrint, Bluetooth, NFC, Wi-Fi Direct, and alternative solutions for non-AirPrint printers. We will also explore troubleshooting tips for common printing issues.

Checking Printer Compatibility

Before attempting to connect your iPhone to a printer, ensure that the printer is compatible with AirPrint. Most modern wireless printers support this feature, but it's always good to double-check by visiting the manufacturer's website or checking the printer's manual.

If your printer does not support AirPrint, don't worry! There are other methods, such as manufacturer apps, Bluetooth, Wi-Fi Direct, and even cloud-based solutions.

Methods to Connect Your iPhone to a Printer

1. Using AirPrint (Recommended for Apple Users)

Apple's AirPrint is the easiest and most seamless way to print from an iPhone. Follow these steps:

1. Ensure your iPhone and printer are connected to the same Wi-Fi network.
2. Open the document, email, photo, or webpage you want to print.
3. Tap the Share button (a square with an upward arrow).
4. Scroll down and tap Print .
5. Select your AirPrint-compatible printer from the available options.
6. Adjust print settings (number of copies, page range, color preferences, etc.).
7. Tap Print , and your document will be printed wirelessly.

2. Connecting via Wi-Fi Direct (Without AirPrint)

If your printer supports Wi-Fi Direct, you can connect your iPhone directly without needing a router.

1. Enable Wi-Fi Direct on your printer (refer to your printer's manual for specific steps).
2. On your iPhone, go to Settings > Wi-Fi .
3. Find the printer's Wi-Fi name and connect to it.
4. Open the file you want to print and tap the Share button.
5. Select Print , choose your printer, and print the document.

3. Printing via Bluetooth

Some printers offer Bluetooth connectivity for wireless printing. Here's how to connect:

1. Turn on Bluetooth on both your iPhone and the printer.
2. On your iPhone, go to Settings > Bluetooth and select your printer.
3. Pair the devices.
4. Open the document or image you want to print.
5. Tap the Share button, select Print , and choose your printer.
6. Tap Print , and the job will be sent via Bluetooth.

4. Printing via NFC (Near Field Communication)

NFC allows you to print by simply placing your iPhone near the printer.

- For iPhone 7 - iPhone X Series : Access the NFC Tag Reader from the Control Center and tap your iPhone near the printer's NFC tag.
- For iPhone XS and later : Just bring your iPhone close to the NFC-enabled printer, and it will automatically detect and start printing.

5. Using Manufacturer Apps for Non-AirPrint Printers

If your printer does not support AirPrint, you can use the printer manufacturer's app to enable wireless printing. Popular brands provide dedicated apps, such as:

- HP Smart (for HP printers)
- Epson iPrint (for Epson printers)
- Canon PRINT Inkjet/SELPHY (for Canon printers)

To use these apps:

1. Download the printer's official app from the App Store.
2. Open the app and follow the setup instructions to connect your iPhone.
3. Select the document or image you want to print and proceed with printing.

6. Printing via Cloud-Based Services

Cloud-based printing solutions like ezeep Blue allow you to print from anywhere.

1. Install the ezeep Blue app and create an account.
2. Add your printer by following the setup instructions.
3. Select the document, tap Print , and choose your printer.

Troubleshooting Common Printing Issues

1. Printer Not Found on iPhone

- Ensure both devices are connected to the same Wi-Fi network .
- Restart the printer, iPhone, and router .
- Check if AirPrint is enabled on your printer.

2. Print Job Stuck or Not Responding

- Restart the printer and iPhone.
- Delete the pending print job from the print queue and try again.

3. Printer Offline or Not Responding

- Move the printer closer to the Wi-Fi router .
- Update your printer's firmware .
- Reset the network settings on your printer.

4. Unable to Print Without AirPrint

- Download the printer's app and connect manually.
- Use Wi-Fi Direct, Bluetooth, or NFC as alternative methods.

Key Takeaways:

- AirPrint is the easiest method for printing wirelessly.
- Wi-Fi Direct and Bluetooth allow printing without AirPrint.
- NFC simplifies the process by enabling tap-to-print.
- Manufacturer apps enable printing on non-AirPrint printers.
- Cloud-based solutions like ezeep Blue provide flexibility for remote printing.
- Troubleshooting common issues ensures a smooth printing experience.

Conclusion

Printing from an iPhone is now simpler than ever, whether through AirPrint, Wi-Fi Direct, Bluetooth, NFC, or dedicated manufacturer apps. By following the steps in this guide, you can easily connect your iPhone to any printer and print seamlessly.

If you encounter any issues, try the troubleshooting tips to resolve them quickly. Happy printing!